

RELIEF Rohan

- 40920** ASSIETTE DE PRESENTATION ROHAN Ø 31 cm
Display plate Ø 12,2" / Teller flach / Plato presentacion
- 41028** ASSIETTE PL 2 ROHAN Ø 28 cm
Dinner Plate Ø 11" / Teller flach / Plato llano
- 40461** ASSIETTE PL 3 ROHAN Ø 26 cm
Dinner Plate Ø 10,2" / Teller flach / Plato llano
- 40592** ASSIETTE PL 7 ROHAN Ø 21,5 cm
Dessert plate Ø 8,5" / Teller flach / Plato llano
- 40932** ASSIETTE PL 9 ROHAN Ø 16,5 cm
Dessert plate Ø 6,5" / Teller flach / Plato llano
- 40464** ASSIETTE CREUSE N° 3 ROHAN Ø 23,3 cm
Soup plate Ø 9,2" / Teller tief / Plato hondo
- 41089** SALADIER N° 0 ROHAN Ø 23,6 cm / 234 cl
*Salad bowl large 9,3" - 79 oz
Salatschüssel / Ensaladera*
- 41092** SALADIER N° 2 ROHAN Ø 17,3 cm / 90 cl
*Salad bowl small Ø 6,8" - 30 oz
Salatschüssel / Ensaladera*
- 40770** TASSE DEJEUNER ROHAN 44 cl
*Breakfast cup 14,9 oz
Frühstück Tasse Obere / Taza desayuno*
- 40780** SOUCOUBE DEJEUNER ROHAN Ø 19,8 cm
Breakfast saucer Ø 7,8" / Untertasse für Frühstück Tasse / Platillo desayuno
- 40769** TASSE THE ROHAN 23 cl
Tea cup 7,8 oz / Tee Tasse Obere / Taza Té
- 40759** SOUCOUBE THE ROHAN Ø 16,5 cm
Tea saucer Ø 6,5" / Untertasse für Tee Tasse / Platillo Té
- 40779** TASSE CAFE ROHAN 13 cl
Coffee cup 4,4 oz / Kaffee Tasse Obere / Taza café
- 40742** SOUCOUBE CAFE ROHAN Ø 13,2 cm
Coffee saucer Ø 5,2" / Untertasse für Kaffee Tasse / Platillo café
- 41633** CAFETIERE ROHAN 96 cl
Coffee pot 32,5 oz / Kaffeekanne / Cafetera
- 41048** THEIERE GM ROHAN 80 cl
Tea pot 27 oz / Teekanne / Tetera
- 60703** THEIERE PM ROHAN 40 cl
Tea pot 13,5 oz / Teekanne / Tetera
- 41046** CREMIER GM ROHAN 45 cl
Milk jug 15,2 oz / Milchkanne / Lechera
- 60561** CREMIER PM ROHAN 20 cl
Milk jug 6,8 oz / Milchkanne / Lechera
- 41043** SUCRIER ROHAN 50 cl
Sugar bowl 16,9 oz / Zuckerdose / Azucarera



40920

41028

40461



40592

40932

40464



41089

41092



40770 / 40780

40769 / 40759

40779 / 40742



41633

41048

60703



41046

60561

41043